


Downhole MWD & RSS Vibration Data on Pason Live

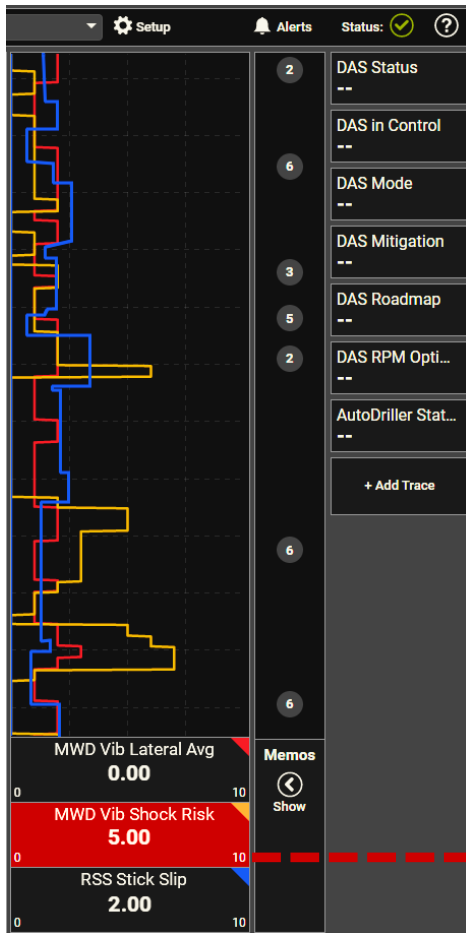

The live graph streams your MWD and RSS data.



Use **Depth Trace Comparison** to view vibration information and compare drilling parameters across multiple wells.

MWD and RSS downhole vibration data can be monitored on Pason Live using Pason standard WITS In codes, configurable on the EDR. See [WITS In for MWD and RSS Vibration Data: Quick Start \(VQT073\)](#) for details.



- Monitor the tools with **live visuals and alerts** related to downhole dysfunctions.
- **Review historical data** for improvements to the BHA or drilling parameters.
- Connect with the Pason ecosystem using standardized **WITSML mnemonics**.
- Add traces for **vibration, steering and rotary** both above and below the motor.